


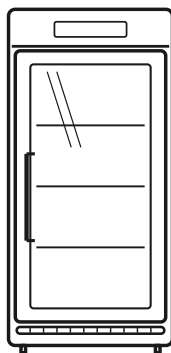

1 Door Upright Bar Fridge

User Manual

BC-310U • BC-400



P : 03 9783 6325

E : sales@borrelli.com.au

www.borrelli.com.au

Contents

- 01 Warnings and Safety
- 02 Installation and Cleaning
- 03 How to Use
- 04 Tips and Tricks
- 05 Specifications
- 06 Before Requesting Service
- 07 Warranty and Enquiries

Warnings and Safety

These precautions ensure safe, correct use of the fridge and minimise the risk of injury or damage.

- Keep all ventilation vents clear while the unit is operating.
- Do not use mechanical devices to accelerate defrosting unless recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- The LED lights must be replaced by a qualified person – contact the customer helpline.
- Do not use electrical appliances inside the food storage compartment.



This product contains R600a / R290 flammable gas. Misuse could result in fire or serious injury.



If you find a gas leak, turn off the unit and open the door. Call your nearest repair agent or Borrelli.

- Do not damage, modify or excessively bend the power cord; if damaged, a qualified technician must replace it.
- Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.
- Dispose of the unit only at an authorised waste centre; do not expose it to a flame.
- Disconnect the unit from power before cleaning, maintenance or replacing parts.
- All repairs, disassembly or modification must be performed by a qualified technician.
- Use a dedicated wall outlet; do not use flammable sprays or substances near the unit.
- The expected noise level of the unit is 55 dB.
- This unit is intended to store and display beverages for sale; do not use it for any other purpose.
- Do not insert anything (fingers, sticks, etc.) into the cold air suction outlet.
- Never place heavy objects or items containing water on top of the unit.
- After switching off, wait 5 minutes before restarting – restarting too soon can blow a fuse, trip the breaker or overload the compressor.



Maximum shelf load is 25 kg. Do not exceed the limit or throw items onto the shelves.


Installation

Before Use

- Remove all packaging and leave it open to ventilate.
- Clean the unit before use.
- Run the unit empty for an hour before loading.

Placement & Clearances

- Indoor use only; keep out of direct sunlight, rain and weather.
- Install on a flat, stable, level surface strong enough to support the unit when loaded.
- 20 mm gap on all sides; 100 mm at the rear for airflow.

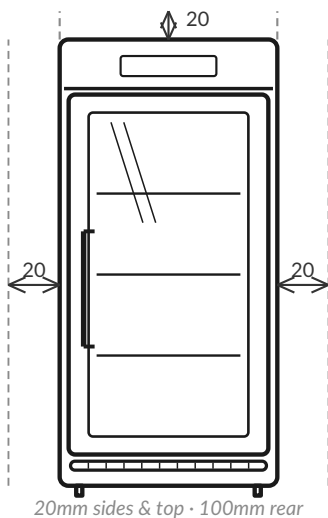

Cleaning



Always disconnect the power cord before cleaning.

Exterior and Interior

- For dust, wipe inside and out with a dry cloth.
- For a deeper clean, use a mild detergent and a soft cloth.
- Clean the fridge regularly.
- Never use polishing powder, soap powder, benzine, oil or hot water – these damage the paint and plastic.



After cleaning, check the power cord for cracks or damage. If you find any, contact Borrelli.

Do not splash or wash the unit with water directly – this could cause a short circuit or shock.

How to Use

This fridge is supplied with one of two control panels, depending on the model. Both are operated in the same way.



BC-310U



BC-400

Power & Light Switches

On the two-switch panel the illuminated red rocker turns the unit on and off, and the green rocker operates the interior LED lighting. On the single-switch panel the green rocker is the power switch. Press to I for on, O for off.

Indicator Icons

On panels fitted with LED indicators (left of the display):

- The compressor icon lights while the unit is cooling.
- The fan icon lights while the evaporator fan is running.
- The snowflake icon lights during a defrost cycle.

Change Set Temperature

1. Press and hold the Set button until you see "St" flashing (approx. 5–7 seconds) and then release this button.
2. Press the Up arrow and you will see "Po" on the display. Then press Set again.
3. Press the Up arrow until the number "55" is on the display. Then press Set. This is now the advanced menu options.
4. Press the Up arrow until you see the "rd" option and press Set. This is the range option you want to change.

5. Press Set again and then use the arrows to adjust the temperature to your desired setting. We recommend the temperature to be set between 2.5 °C–3 °C.
6. Press Set to save this temperature.
7. Leave the controller for 7 seconds to return back to the default temperature display.

Changing Variance Temperature

1. Press and hold the Set button until you see "St" flashing. This should take about 7 seconds. Once flashing, release the button.
2. Press Set again and then use the arrows to adjust the temperature to your desired setting. We recommend a setting between 3 °C and 5 °C.
3. Once completed press the Set button to save the setting.
4. Leave the controller for 7 seconds to return back to the default temperature display.

Manual Defrost

1. Press and hold the defrost button (snowflake / Rst) for about 3 seconds.
2. Defrosting begins and ends automatically once complete.

Controller Reset

If the controller stops responding, switch the unit off at the power switch, wait 5 minutes, then switch it back on. Allow the fridge to return to temperature before reloading stock.

Tips and Tricks

Follow these tips to get the best performance, efficiency and lifespan from the fridge.

Transportation

- You may transport the unit on its back for short periods only.
- Let the unit stand upright for 12 hours before switching on, so the refrigerant can settle.
- Protect the power cord during transportation.

Drain Tray

- Defrosting is automatic; drain water collects in the tray and evaporates automatically.

Shelves

- Adjust the shelves to suit the items placed on them.
- Each shelf has a maximum load of 25 kg.

Condensation in a high-humidity environment is normal. Wipe it away with a damp cloth – this is not a defect.

Do not obstruct the fan by placing items in front of it. Keep the airflow clearances shown in Installation.

Specifications

Figures are from the current product listings at borrelli.com.au.

Specification	BC-310U	BC-400
Capacity	310 L	299 L
External W×D×H	600 × 530 × 1820	610 × 670 × 2000
Internal W×D×H	500 × 380 × 1400	510 × 490 × 1560
Temperature range	2 – 10 °C	0 – 10 °C
Weight	78 kg	82 kg
Shelves	5	5 (adjustable)
Door type	Hinged glass	Hinged glass
Interior lighting	LED	LED
Lockable door	Yes	Yes
Mobility	—	Lockable castors
Max ambient temp.	40 °C	25 °C

Figures from borrelli.com.au (BC-310U = 310 L, BC-400 = 299 L). Refrigerant type isn't published on either page; confirm per model (R600a / R290) before print.

Before Requesting Service

Please check the following if you encounter a problem. If it continues after these checks, contact Borrelli.

No Refrigeration	• Is the power supply interrupted? • Is the power cord securely connected? • Is a fuse blown or the breaker tripped?
Inadequate Refrigeration	• Is the temperature setting appropriate? • Is anything obstructing the air inlet or outlet? • Are stored items packed too tightly? • Is the door frequently opened or left ajar?
Excessive Noise	• Are all the feet in firm contact with the floor? • Is the back of the fridge touching the wall? • Are other objects resting on the fridge?

Warranty and Enquiries

Warranty periods vary by product. For the period that applies to this model, see its product page at borrelli.com.au. For the warranty terms and how to make a claim, see our Terms & Conditions. Keep your proof of purchase, as it may be required.

Enquiries

Phone	03 9783 6325
Email	sales@borrelli.com.au
Website	www.borrelli.com.au