


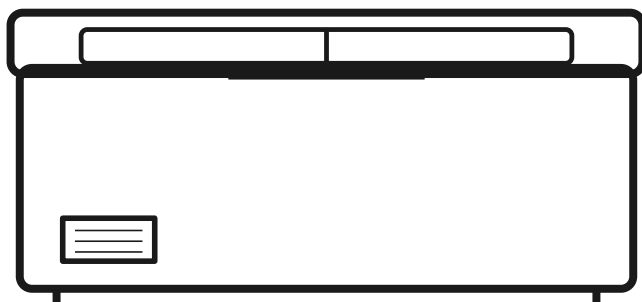

Glass-Top Chest Freezer

User Manual
CF-620 • CF-720



P : 03 9783 6325
E : sales@borrelli.com.au
www.borrelli.com.au

Contents

- 01 Warnings and Safety
- 02 Installation and Cleaning
- 03 How to Use
- 04 Tips and Tricks
- 05 Specifications
- 06 Before Requesting Service
- 07 Warranty and Enquiries

Warnings and Safety

These precautions ensure safe, correct use of the freezer and minimise the risk of injury or damage.

- Keep all ventilation vents clear while the unit is operating.
- Do not use mechanical devices to accelerate defrosting unless recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- The LED lights must be replaced by a qualified person – contact the customer helpline.
- Do not use electrical appliances inside the food storage compartment.



This unit uses R134A or R290 refrigerant – check the rating plate. If R290 is fitted it is a flammable gas; misuse could result in fire or serious injury.



If you find a gas leak, turn off the unit and open the door. Call your nearest repair agent or Borrelli.

- Do not damage, modify or excessively bend the power cord; if damaged, a qualified technician must replace it.
- Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.
- Dispose of the unit only at an authorised waste centre; do not expose it to a flame.
- Disconnect the unit from power before cleaning, maintenance or replacing parts.
- All repairs, disassembly or modification must be performed by a qualified technician.
- Use a dedicated wall outlet; do not use flammable sprays or substances near the unit.
- The expected noise level of the unit is 55 dB.
- This unit is intended to store and display beverages for sale; do not use it for any other purpose.
- Do not insert anything (fingers, sticks, etc.) into the cold air suction outlet.
- Never place heavy objects or items containing water on top of the unit.
- After switching off, wait 5 minutes before restarting – restarting too soon can blow a fuse, trip the breaker or overload the compressor.



Do not overload the freezer or stack stock above the load line.


Installation

Before Use

- Remove all packaging and leave it open to ventilate.
- Clean the unit before use.
- Run the unit empty for an hour before loading.

Placement & Clearances

- Indoor use only; keep out of direct sunlight and weather.
- Install on a flat, stable, level surface.
- 20 mm on the sides and 100 mm at the rear for airflow.
- Leave clearance above to open the lid fully.

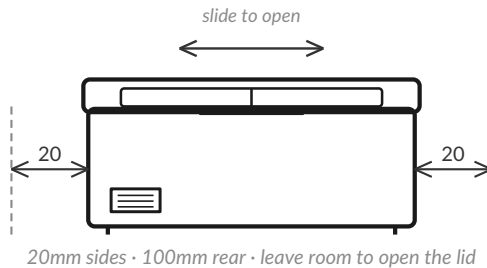

Cleaning



Always disconnect the power cord before cleaning.

Exterior and Interior

- For dust, wipe inside and out with a dry cloth.
- For a deeper clean, use a mild detergent and a soft cloth.
- Clean the freezer regularly.
- Never use polishing powder, soap powder, benzine, oil or hot water – these damage the paint and plastic.



After cleaning, check the power cord for cracks or damage. If you find any, contact Borrelli.

Do not splash or wash the unit with water directly – this could cause a short circuit or shock.

How to Use

The freezer is operated using the temperature control on the front of the unit.

Setting the Temperature

We recommend a freezing temperature of around -18°C .

1. Locate the temperature control on the front of the unit.
2. Set it to your desired freezing temperature.
3. Allow the freezer to run for a few hours to reach temperature before loading stock.

Manual Defrost

Defrost the freezer whenever ice builds up on the interior walls.

1. Switch off and unplug the freezer.
2. Remove all stock to alternative frozen storage.
3. Leave the lid open and allow the ice to melt.
4. Drain the melt water using the drain plug at the base.
5. Dry the interior, then switch the freezer back on and let it return to temperature before reloading.

Tips and Tricks

Follow these tips to get the best performance, efficiency and lifespan from the freezer.

Baskets

- Distribute stock evenly across the baskets.
- Do not fill above the load line inside the cabinet.

Defrosting

- Defrost the freezer when ice builds up (see How to Use).
- Never use sharp tools to remove ice – this can damage the interior.

Transportation

- Always keep the freezer upright.
- After moving, let it stand a few hours before switching on.

Keep the lid closed as much as possible to hold temperature and reduce ice build-up.

Condensation on the exterior in humid conditions is normal. Wipe it away with a damp cloth – this is not a defect.

Specifications

Figures are from the current product listings at borrelli.com.au.

Specification	CF-620	CF-720
Capacity	545 L	600 L
External L×D×H	1820 × 670 × 850	2000 × 670 × 850
Internal L×D×H	1670 × 535 × 600	1860 × 535 × 600
Freezer temperature	-18 °C	-18 °C
Baskets	6	7
Lid	Sliding glass, lockable	Sliding glass, lockable
Weight	76 kg	86 kg
Rated power	252 W	365 W
Max ambient temp.	32 °C	32 °C

Capacities and dimensions from borrelli.com.au. Supplier catalogue (Santa SD-620Q / SD-720Q): sliding glass lid, ≤ -18 °C, refrigerant R134A or R290 – check the rating plate.

Before Requesting Service

Please check the following if you encounter a problem. If it continues after these checks, contact Borrelli.

No Refrigeration	• Is the power supply interrupted? • Is the power cord securely connected? • Is a fuse blown or the breaker tripped?
Inadequate Refrigeration	• Is the temperature setting appropriate? • Is anything obstructing the air inlet or outlet? • Are stored items packed too tightly? • Is the door frequently opened or left ajar?
Excessive Noise	• Are all the feet in firm contact with the floor? • Is the back of the freezer touching the wall? • Are other objects resting on the freezer?

Warranty and Enquiries

Warranty periods vary by product. For the period that applies to this model, see its product page at borrelli.com.au. For the warranty terms and how to make a claim, see our Terms & Conditions. Keep your proof of purchase, as it may be required.

Enquiries

Phone	03 9783 6325
Email	sales@borrelli.com.au
Website	www.borrelli.com.au