




Double Bowl Sink

User Manual

SSS-TB-LHD-1400 • SSS-TB-RHD-1400 • SSS-TB-LHD-1600 •
SSS-TB-RHD-1600 • SSS-TB-1800

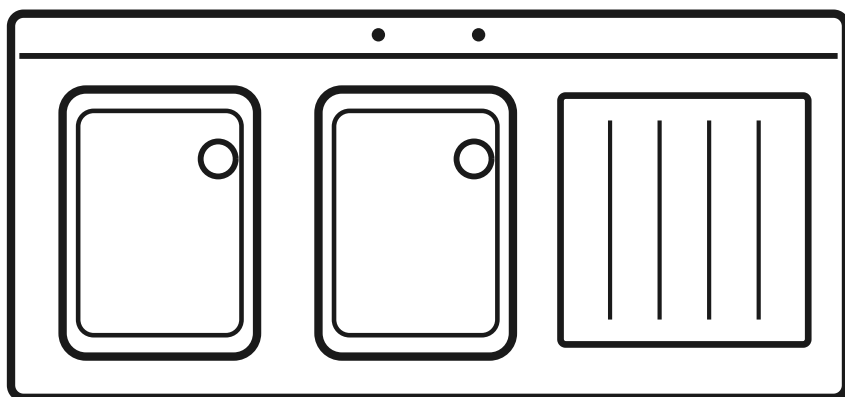

P : 03 9783 6325

E : sales@borrelli.com.au

www.borrelli.com.au

Contents

- 01 Safety
- 02 Installation
- 03 Care and Cleaning
- 04 Maintenance
- 05 Specifications
- 06 Troubleshooting
- 07 Warranty and Enquiries

Safety

Please follow these precautions when installing, using and cleaning the sink.

- Have all water supply and waste connections carried out by a licensed plumber, in line with local plumbing regulations.
- The sink is heavy – use enough people or equipment to lift and position it. Do not lift it by the drainer, taps or bowl edges.
- Do not sit, stand on, or place heavy loads on the sink top, drainer or undershelf.
- Do not pour fats, oils or grease down the waste – they solidify and block the drain.
- Keep the floor around the sink dry to reduce the risk of slips.
- Take care with knives or sharp utensils left in the bowl or hidden under soapy water.



Do not use chlorine bleach or chloride-based cleaners on stainless steel – they cause pitting and corrosion. If any is spilt, rinse it off immediately with clean water.


Installation

Before Use

- Remove all packaging and peel off the protective film from the stainless surfaces.
- Wash the sink and drainer with warm, soapy water before first use.

Positioning

- Stand the sink on a firm, level floor able to take its weight when the bowls are full.
- Screw the adjustable feet in or out until the sink is level and stable – check with a spirit level.
- Leave access behind the sink for the waste and trap.

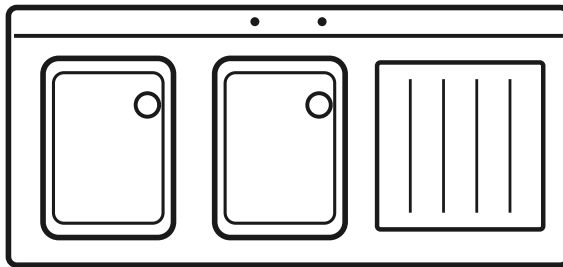

Plumbing

- Connect the 40 mm waste outlet to the building drainage through a water trap, using approved fittings and seals.
- Fit the standpipe plug and the removable scrap trap into the corner drain.
- If a tap is fitted, connect the hot and cold supply; taps and plumbing must be installed by a licensed plumber.
- Where the splashback meets a wall, seal the join with food-safe silicone.

Run water and check every joint for leaks before putting the sink into service.

Care and Cleaning

Everyday Cleaning

- Rinse the sink and drainer with clean water after use to remove detergent and food residues.
- Wipe with a soft cloth or sponge and a mild detergent, working in the direction of the steel grain.
- Dry with a soft cloth to prevent water spots and mineral (tea) staining.

Weekly / Deeper Clean

- For stubborn marks, use a proprietary stainless steel cleaner or a paste of bicarbonate of soda and water.
- Always rub along the grain, then rinse thoroughly and dry.

Surface Rust or Tea Staining

- Brown specks are usually iron particles from other cookware, not the sink itself.
- Remove them with a stainless cleaner or bicarb paste, then rinse and dry.



Never use steel wool, wire brushes or abrasive pads, and avoid bleach or chloride cleaners – these scratch the surface or cause rust and pitting.

Maintenance

Routine Checks

- Empty and rinse the removable scrap trap regularly; clear the standpipe and flush the drain to keep water flowing freely.
- Check the adjustable feet and re-level the sink if the floor settles.
- Inspect the waste, trap and any tap connections for leaks; tighten or reseal as needed.

Protecting the Finish

- Do not leave cast-iron or carbon-steel items sitting in the bowl – they transfer iron that rusts.
- Do not leave salt, acidic foods or wet cloths on the surface for long periods.
- Keeping the steel clean and dry maintains its passive layer and corrosion resistance.

In coastal or humid areas, clean more often to prevent tea staining – surface discolouration rather than a fault in the steel.

Specifications

Figures are from the current product listings at borrelli.com.au.

Specification	1400 LH	1400 RH	1600 LH
Overall L × D	1400 × 600	1400 × 600	1600 × 600
Height front / rear	860 / 960	860 / 960	860 / 960
Bowls	2	2	2
Bowl L × D × H	400×400×250	400×400×250	400×400×250
Drainer	Left	Right	Left
Waste outlet	40 mm	40 mm	40 mm
Scrap trap	Removable	Removable	Removable
Undershelf	1	1	1
Weight	32 kg	32 kg	36 kg

Specification	1600 RH	1800 DD
Overall L × D	1600 × 600	1800 × 600
Height front / rear	860 / 960	860 / 960
Bowls	2	2
Bowl L × D × H	400×400×250	400×400×250
Drainer	Right	Double
Waste outlet	40 mm	40 mm
Scrap trap	Removable	Removable
Undershelf	1	1
Weight	36 kg	40 kg

Dimensions in mm, from borrelli.com.au. Height is 860 mm at the front, rising to 960 mm at the rear splashback. Each bowl 400 × 400 × 250 mm; corner drain with standpipe plug and removable scrap trap; commercial-grade stainless steel.

Troubleshooting

Please check the following if you encounter a problem. If it continues after these checks, contact Borrelli.

Slow or Blocked Drain	• Is the scrap trap full? Empty and rinse it. • Is the standpipe or trap blocked? Clear and flush it.
Leak at the Waste	• Is the plug seated correctly against its seal? • Is the waste nut or trap loose? Tighten it, and reseal if it continues.
Surface Rust Spots	• Are steel or cast-iron items being left in the bowl? • Clean the spots with bicarb paste; avoid steel wool and bleach.
Water Spots or Streaks	• Is the sink left wet after use? Dry it with a soft cloth. • Use a stainless steel cleaner to restore the finish.
Sink Wobbles	• Are all feet in firm contact with the floor? • Adjust the feet to level and steady the sink.

Enquiries

Phone: 03 9783 6325 · Email: sales@borrelli.com.au · www.borrelli.com.au

Warranty and Enquiries

Warranty periods vary by product. For the period that applies to this model, see its product page at borrelli.com.au. For the warranty terms and how to make a claim, see our Terms & Conditions. Keep your proof of purchase, as it may be required.

Enquiries

Phone	03 9783 6325
Email	sales@borrelli.com.au
Website	www.borrelli.com.au