




Single Bowl Sink

User Manual

SSS-SB-LHD-1000 · SSS-SB-LHD-1200 · SSS-SB-RHD-1200

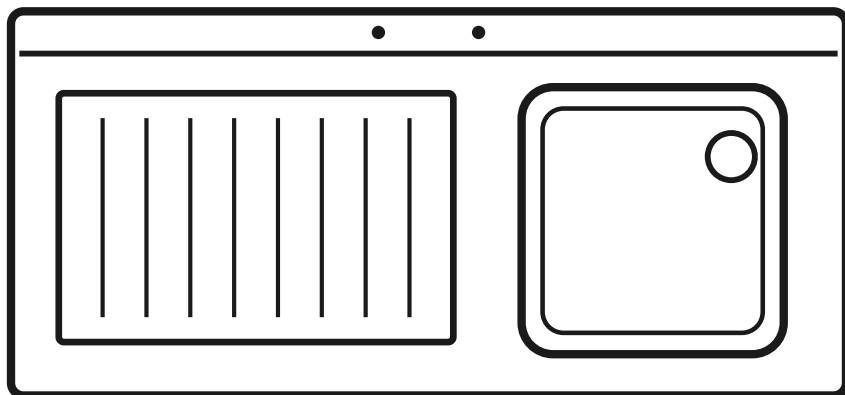

P : 03 9783 6325

E : sales@borrelli.com.au

www.borrelli.com.au

Contents

01	Safety
02	Installation
03	Care and Cleaning
04	Maintenance
05	Specifications
06	Troubleshooting
07	Warranty and Enquiries

Safety

Please follow these precautions when installing, using and cleaning the sink.

- Have all water supply and waste connections carried out by a licensed plumber, in line with local plumbing regulations.
- The sink is heavy – use enough people or equipment to lift and position it. Do not lift it by the drainer, taps or bowl edges.
- Do not sit, stand on, or place heavy loads on the sink top, drainer or undershelf.
- Do not pour fats, oils or grease down the waste – they solidify and block the drain.
- Keep the floor around the sink dry to reduce the risk of slips.
- Take care with knives or sharp utensils left in the bowl or hidden under soapy water.



Do not use chlorine bleach or chloride-based cleaners on stainless steel – they cause pitting and corrosion. If any is spilt, rinse it off immediately with clean water.


Installation

Before Use

- Remove all packaging and peel off the protective film from the stainless surfaces.
- Wash the sink and drainer with warm, soapy water before first use.

Positioning

- Stand the sink on a firm, level floor able to take its weight when the bowls are full.
- Screw the adjustable feet in or out until the sink is level and stable – check with a spirit level.
- Leave access behind the sink for the waste and trap.

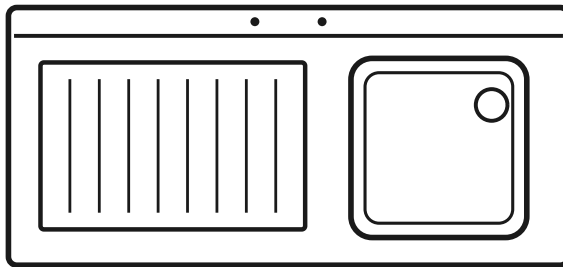

Plumbing

- Connect the 40 mm waste outlet to the building drainage through a water trap, using approved fittings and seals.
- Fit the standpipe plug and the removable scrap trap into the corner drain.
- If a tap is fitted, connect the hot and cold supply; taps and plumbing must be installed by a licensed plumber.
- Where the splashback meets a wall, seal the join with food-safe silicone.

Run water and check every joint for leaks before putting the sink into service.

Care and Cleaning

Everyday Cleaning

- Rinse the sink and drainer with clean water after use to remove detergent and food residues.
- Wipe with a soft cloth or sponge and a mild detergent, working in the direction of the steel grain.
- Dry with a soft cloth to prevent water spots and mineral (tea) staining.

Weekly / Deeper Clean

- For stubborn marks, use a proprietary stainless steel cleaner or a paste of bicarbonate of soda and water.
- Always rub along the grain, then rinse thoroughly and dry.

Surface Rust or Tea Staining

- Brown specks are usually iron particles from other cookware, not the sink itself.
- Remove them with a stainless cleaner or bicarb paste, then rinse and dry.



Never use steel wool, wire brushes or abrasive pads, and avoid bleach or chloride cleaners – these scratch the surface or cause rust and pitting.

Maintenance

Routine Checks

- Empty and rinse the removable scrap trap regularly; clear the standpipe and flush the drain to keep water flowing freely.
- Check the adjustable feet and re-level the sink if the floor settles.
- Inspect the waste, trap and any tap connections for leaks; tighten or reseal as needed.

Protecting the Finish

- Do not leave cast-iron or carbon-steel items sitting in the bowl – they transfer iron that rusts.
- Do not leave salt, acidic foods or wet cloths on the surface for long periods.
- Keeping the steel clean and dry maintains its passive layer and corrosion resistance.

In coastal or humid areas, clean more often to prevent tea staining – surface discolouration rather than a fault in the steel.

Specifications

Figures are from the current product listings at borrelli.com.au.

Specification	1000 LH	1200 LH	1200 RH
Overall L × D	1000 × 600	1200 × 600	1200 × 600
Height front / rear	860 / 960	860 / 960	860 / 960
Bowls	1	1	1
Bowl L × D × H	400 × 400 × 250	400 × 400 × 250	400 × 400 × 250
Drainer	Left hand	Left hand	Right hand
Drain	Corner / standpipe	Corner / standpipe	Corner / standpipe
Waste outlet	40 mm	40 mm	40 mm
Scrap trap	Removable	Removable	Removable
Undershelf	1	1	1
Weight	22 kg	26 kg	26 kg

Dimensions in mm, from borrelli.com.au. Height is 860 mm at the front, rising to 960 mm at the rear splashback. All bowls 400 × 400 × 250 mm; construction commercial-grade stainless steel.

Troubleshooting

Please check the following if you encounter a problem. If it continues after these checks, contact Borrelli.

Slow or Blocked Drain	• Is the scrap trap full? Empty and rinse it. • Is the standpipe or trap blocked? Clear and flush it.
Leak at the Waste	• Is the plug seated correctly against its seal? • Is the waste nut or trap loose? Tighten it, and reseal if it continues.
Surface Rust Spots	• Are steel or cast-iron items being left in the bowl? • Clean the spots with bicarb paste; avoid steel wool and bleach.
Water Spots or Streaks	• Is the sink left wet after use? Dry it with a soft cloth. • Use a stainless steel cleaner to restore the finish.
Sink Wobbles	• Are all feet in firm contact with the floor? • Adjust the feet to level and steady the sink.

Enquiries

Phone: 03 9783 6325 · Email: sales@borrelli.com.au · www.borrelli.com.au

Warranty and Enquiries

Warranty periods vary by product. For the period that applies to this model, see its product page at borrelli.com.au. For the warranty terms and how to make a claim, see our Terms & Conditions. Keep your proof of purchase, as it may be required.

Enquiries

Phone	03 9783 6325
Email	sales@borrelli.com.au
Website	www.borrelli.com.au